


Installation Guide - Code 4906 Wall Bracket Dispenser

1
diagram

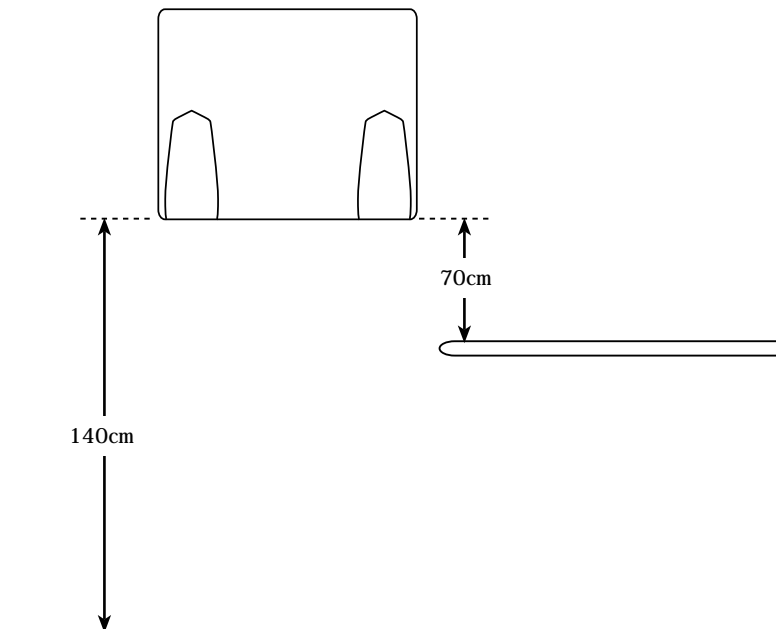

1. To position on wall, hold dispenser squarely against wall while you mark drilling holes.
2. Recommended dispenser placement: the bottom of the dispenser should be approximately 140cm above the floor or 70cm above the bench with the prongs pointing upwards (see diagram 1).
3. Use all screws and plugs provided as a minimum to attach dispenser to wall.
4. Use a 6mm drill bit in conjunction with the enclosed wall plugs for masonry walls. If plugs are not to be used, then choose an appropriate drill bit.
5. Using base mark as a guide replace dispenser and fix to the wall with the enclosed screws. (Measurements below, diagram 2).

2
diagram

